

general commands

find an Netcomposer in the Network

Command:	[255.63]
Answer:	[NetComposer_Adress.60.S1.NCR ...]

NetComposer addressing

Command:	[255.255.<ncr_serial>.<new_adress>]
----------	-------------------------------------

Netcomposer run an command

Command:	[NetComposer_Adress.62.xxxxxxxx]
Answer:	[NetComposer_Adress.60.xxxxxxx]

NetComposer run an global command

Command:	[255.62.xxxxxxxx]
Answer:	[NetComposer_Adress.60.xxxxxxx]

NetComposer change System mode

Command:	[NetComposer_Adress.64.system_mode]
Answer:	[NetComposer_Adress.60."System_Mode".mode]

From:

<https://api.intelligent-lighting.de/> - **Netcomposer API**

Permanent link:

<https://api.intelligent-lighting.de/doku.php?id=simple:commands&rev=1469452051>

Last update: **2016/07/25 15:07**

